



# Einbauskitze Flügelklappenbremse Diskantseite

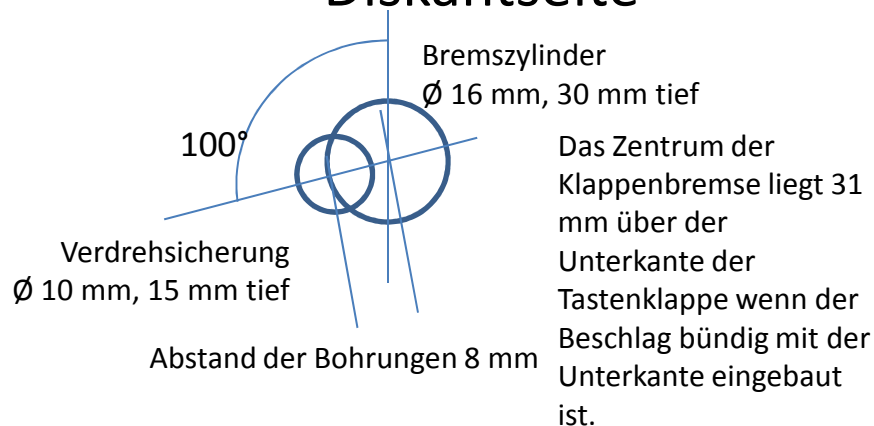


Markieren Sie zuerst die Positionen für die beiden Bohrungen im Abstand von 8 mm.  
Wir empfehlen zuerst die Vertiefung Ø 10 mm, 15 mm tief für die Verdrehsicherung einzubringen (Position 100° nach hinten von der Senkrechten gemessen).  
Danach die Hauptbohrung Ø 16 mm, 30 mm tief für den Bremszylinder einbringen.  
Die Position der Bremszylinders liegt mindestens 31 mm über der Unterkante der Tastenklappe.  
Die Gegenbeschläge sind 10 x 40 mm groß.

# Grandpiano slow fall Treble side

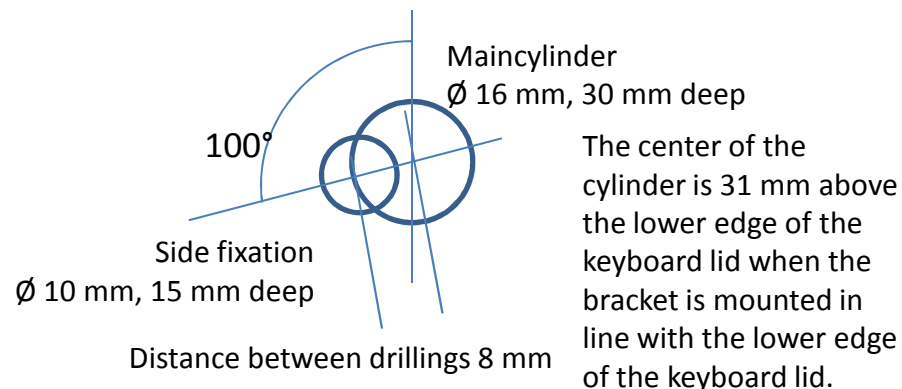


First mark the two positions of the drillings which have a distance of 8 mm.  
We recommend to drill first the hole for the fixation Ø 10 mm, 15 mm deep (Position 100° backwards from the vertical).  
For second do the main drilling Ø 16 mm, 30 mm deep for the cylinder.  
The center of the cylinder is 31 mm above the lower edge of the keyboard lid when the bracket is mounted in line with the lower edge of the keyboard lid.  
The brackets are 10 x 40 mm.

SEITENWAND\_LINKS

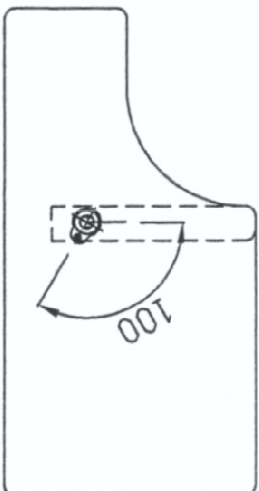

RECHTS\_SPIEGELBILDLICH

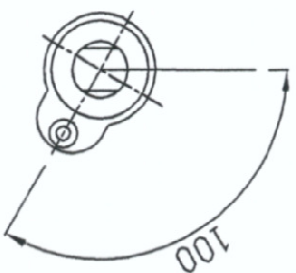

RICHTIG



FALSCH

